



Using a pin or the tip of an X-Acto blade (being careful not to nick or damage the element), pull the element out of the glow plug so that it looks something like the figure above. You want to get at least two coils out into the air/propane flow. Extend the element at least 1/8 of an inch (3 mm) beyond the tip of the glow plug. If you can not get the turbine to ignite consistently, try extending the element even farther.